

FLAT BACKS

Code	For digital/ dial indicators
7330-F1	2311
	2301
	2302
	2308
	2309 (except
	2309-30, 2309-30F)
	2313
	2314
	2316
	2324
7330-F2	2801
	2103
	2104
	2108
	2109
	2112
	2115
	2116
	2117
	2118
7330-F5	2138
	2139
	2501
	2137



7330-F2



7330-F8

Code	For digital/ dial indicators
7330-F6	2318
	2307
	2326
7330-F7	2830
	2882
	2885
	2888
	2889
	2891
7330-F8	2892
	2890
	2887
7330-F9	2886
7330-F10	2310

