


LUG BACKS

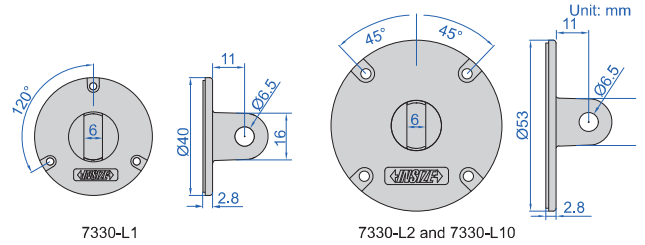


7330-L2



Code	For digital/ dial indicators
7330-L1	2311
7330-L2	2301
	2302
	2308
	2309 (except 2309-30, 2309-30F)
	2313
	2314
	2316
	2324
	2801
	7330-L5
2104	
2108	
2109	
2112	
2115	
2116	
2117	
2118	
2138	
2139	
2501	
2137	



7330-L8

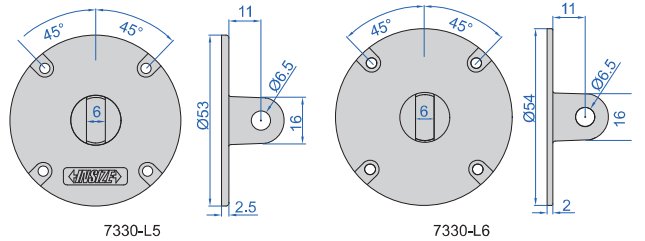

Code	For digital/ dial indicators
7330-L6	2318
	2307
	2326
7330-L7	2830
	2882
	2885
	2888
	2889
	2891
7330-L8	2892
	2890
7330-L10	2887
7330-L11	2310
7330-L11	2114

