

PRESET TORQUE SCREWDRIVER

- Meet DIN ISO 6789
- Torque value can be preset within the adjust range (torque adjustment tool **IST-P-TOOL** and torque tester are needed)
- Clockwise and counter-clockwise operation



torque adjust tool (optional)

SPECIFICATION

Code	IST-PS06	IST-PS06B	IST-PS2	IST-PS2B	IST-PS4	IST-PS4B	IST-PS6	IST-PS6B
Adjust range*	0.2~0.6N.m	0.2~0.6N.m	0.6~2N.m	0.6~2N.m	0.4~4N.m	0.4~4N.m	0.4~6N.m	0.4~6N.m
Accuracy	±6%	±6%	±6%	±6%	±6%	±6%	±6%	±6%
Head type	1/4" square driver	1/4" hex socket	1/4" square driver	1/4" hex socket	1/4" square driver	1/4" hex socket	1/4" square driver	1/4" hex socket
Length	155mm	155mm	155mm	155mm	155mm	155mm	185mm	185mm
Weight	180g	180g	185g	185g	260g	260g	330g	330g

OPTIONAL ACCESSORY

Torque adjust tool	IST-P-TOOL
--------------------	-------------------

* Adjust to a fixed torque value according to the need