


## Spare parts for dial indicator 2308 series

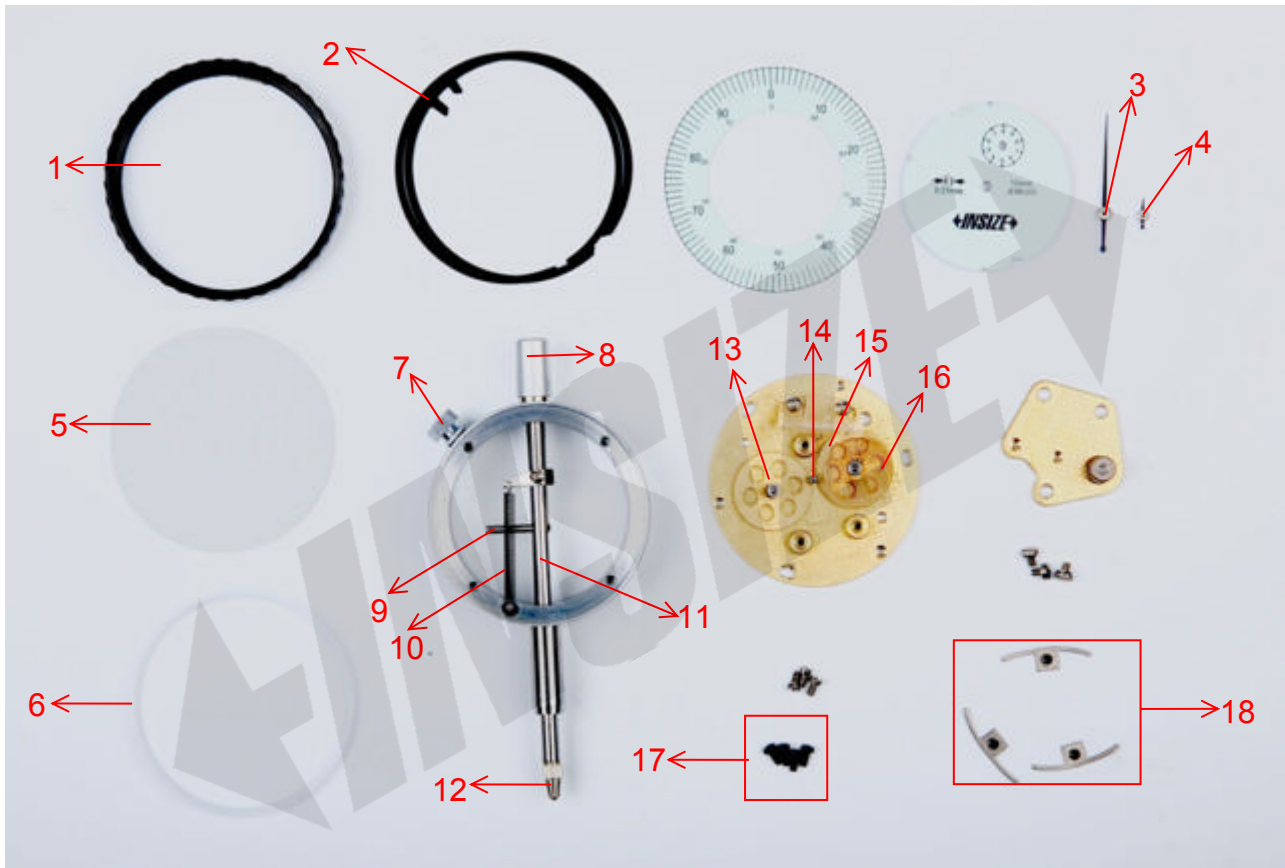

Part NO.	Code	Description
1	SP-BEZEL-2308T	Bezel
2	SP-MARK-1	Tolerance mark
3	SP-NEEDLES-1	Big needle
4	SP-NEEDLES-2	Small needle
5	SP-DIAL-GLASS-2308	Glass
6	SP-WASHER-2308T	Washer
7	SP-LOCK SCREW-2308	Lock screw
8	SP-CAP-2308	Anti-dust cap
9	SP-GUIDE PIN-2308T	Guide pin
10	SP-SPRING-2308	Spring
11	SP-SPINDLE-2308T	Spindle
12	SP-POINT-WL-1	Contact point
13	SP-MAIN GEAR-2308T	Main gear
14	SP-CENTRAL GEAR-2308T	Central gear
15	SP-GEAR 2-2308T	Assistant gear
16	SP-SPIRAL SPRING-2308T	Spiral spring
17	SP-BACK SCREW-2308	Screw for back
18	SP-SNAP SPRING-2308T	Snap spring