

Spare parts for dial indicator 2313 series



Part NO.	Code	Description
1	SP-DIAL-GLASS-2313-1	Glass
2	SP-MARK-2313	Tolerance mark
3	SP-LOCKING SCREW-2313-1	Locking screw for the mechanism
4	SP-BACK SCREW-2308	Screw for back
5	SP-LOCK SCREW-2308	Lock screw
6	SP-BEZEL YB-2313	Plate for 2313
7	SP-CAP-2313	Anti-dust cap
8	SP-SPRING-2313	Spring
9	SP-SPINDLE-2313-1	Spindle
10	SP-LOCATING PIN-2313	locating pin
11	SP-POINT-WL-1	Contact point
12	SP-MAIN GEAR-2313	Main gear
13	SP-CIRCLIP-2313	circlip for 2313
14	SP-BEZEL-2313	Bezel
15	SP-POINTER-2313-1	Long pointer
16	SP-POINTER-2313-2	Short pointer
17	SP-PLATE-2313	Plate for 2313