


Spare parts for bore gage 2827/2127 series

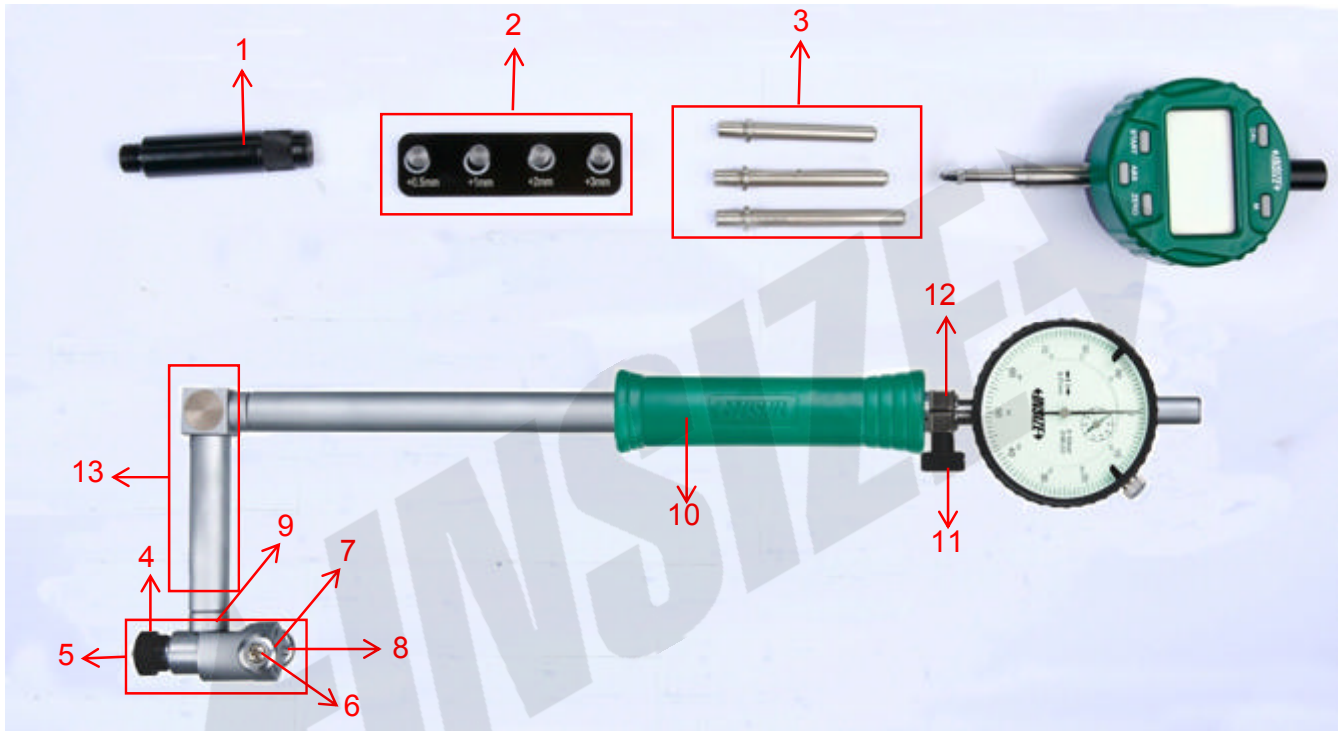

Part NO.	Code	Description
1	SP-EXTENSION ROD-50	Extension rod for 2827-250A/450A and 2127-250/450
	SP-EXTENSION ROD-55	Extension rod for 2827-160A and 2127-160
	SP-EXTENSION ROD-100	Extension rod for 2827-450A and 2127-450
2	SP-BORE-GASKET-0.5/1/2/3	Gasket for 2827-160A and 2127-160
	SP-BORE-GASKET-0.5/1/2/3/6	Gasket for 2827-250A/450A and 2127-250/450
3	7350-160	Interchangeable anvil for 2827-160A and 2127-160 (set)
	7350-250	Interchangeable anvil for 2827-250A and 2127-250 (set)
	7350-450	Interchangeable anvil for 2827-450A and 2127-450 (set)
4	SP-SCREW-NUT-2322-1	Nut for 2827-160A and 2127-160
	SP-SCREW-NUT-2322-2	Nut for 2827-250A/450A and 2127-250/450
5	SP-HEAD-D-100/160	Measuring head for 2827-160A and 2127-160 (not include NO.3 \4\9)
	SP-HEAD-D-250	Measuring head for 2827-250A and 2127-250 (not include NO.3 \4\9)
	SP-HEAD-D-450	Measuring head for 2827-450A and 2127-450 (not include NO.3 \4\9)
6	SP-GUIDE SCREW-13	Guide screw for 2827-160A and 2127-160 (Ø13mm, in pairs)
	SP-GUIDE SCREW-15	Guide screw for 2827-250A/450A and 2127-250/450 (Ø15mm, in pairs)
7	SP-GUIDE WHEEL-13	Guide wheel for 2827-160A and 2127-160 (Ø13mm, in pairs)
	SP-GUIDE WHEEL-15	Guide wheel for 2827-250A/450A and 2127-250/450 (Ø15mm, in pairs)
8	SP-MOVING TIP-2322-160	Moving tips, ceramic, for 2827-160A and 2127-160
	SP-MOVING TIP-2322-250	Moving tips, ceramic, for 2827-250A and 2127-250
	SP-MOVING TIP-2322-450	Moving tips, ceramic, for 2827-450A and 2127-450
9	SP-SLEEVE RING-D-100/160	Sleeve ring for 2827-160A and 2127-160
	SP-SLEEVE RING-D-250	Sleeve ring for 2827-250A and 2127-250
	SP-SLEEVE RING-D-450	Sleeve ring for 2827-450A and 2127-450
10	SP-SB-DBG-2	Handle 2827-160A and 2127-160
	SP-SB-DBG-3	Handle 2827-250A/450A and 2127-250/450
11	SP-BORE-SCREW	Locking screw
12	SP-HOLDER	Holder
13	SP-TRANSFER ROD-2827-160A	Transfer rod for 2827-160A and 2127-160